

**Summary:** This TIP includes instructions on how to set up RTK using an RTCM data source on the 4000.

Note: Before you begin, you must make sure that the RTCM V2.0 / V2.01 Output / Input and the RTK options are installed in the receiver.

## **1 What to Do with the Reference Station**

- a. Turn on your reference station.
- b. Press the gray **CONTROL** key.
- c. Toggle **MORE** until you see **RTCM-104 OUTPUT**.
- d. Press the black display soft key next to **RTCM-104 OUTPUT**.
- e. Under **FORMAT**, press the black display soft key until you select **RTK / RTCM**.

## **2 What to Do with the Mobile Unit**

- a. Toggle to the **RTCM-104 INPUT** menu.
- b. Under **FORMAT**, toggle and select **RTK-L1/L2**.
- c. Under **INPUT**, select **ON/AUTO**.
- d. Change **PORT SELECT** to appropriate port, which is typically Port 2.

Note: Survey Controller version 6 does this automatically.

© 1998 Trimble Navigation Limited. All rights reserved.  
4000 is a trademark of Trimble Navigation Limited.